

Release Lock p3

531.81.000

Scope of Delivery

- Release Lock p3 531.81.100
- Instruction sheet 02.8616


Purpose of Use

This *Release Lock p3* can be used on a Sinar p3, Sinar f3 and Sinar f3 SL view camera.

The *Release Lock p3* prevents from the accidental release of the locking button of the standards of the above-mentioned cameras.

The *Release Lock p3* can be mounted to any of the four release buttons of the Sinar p3 and Sinar f3 – two buttons in the case of the Sinar f3 SL.


It is suggested applying a *Release Lock p3* at least to the right release button of the rear standard (digital back) and the right release button of the front standard (lens).

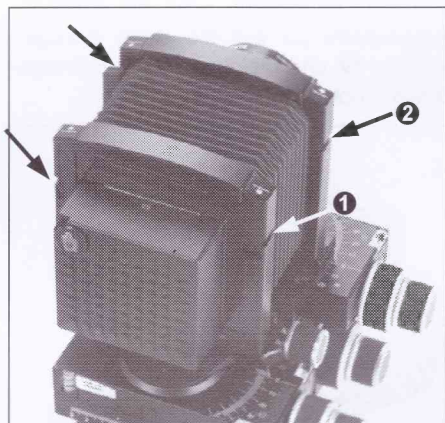


Mounting

1. Clean the surfaces where the *Release Lock p3* should be applied. Make sure they are clean and free of grease.


2. Remove the protection-foil of the adhesive strip.

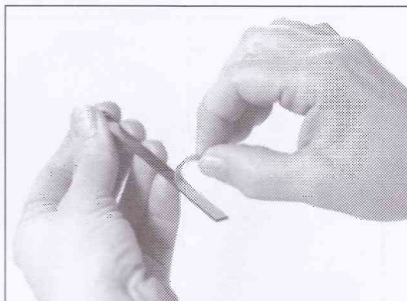

3. Insert the tappet of the *Release Lock p3* into the groove underneath the release button of the standard (3) and align the *Release Lock p3* with the lateral surface of the carrier frame.

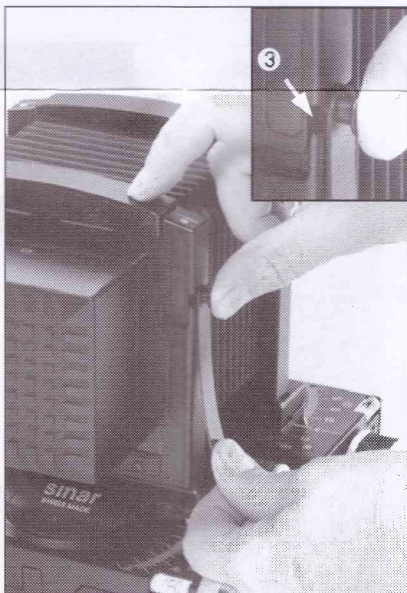


4. Carefully press the *Release Lock p3* onto the carrier frame and keep it pressed (4) for a few seconds (see next image).

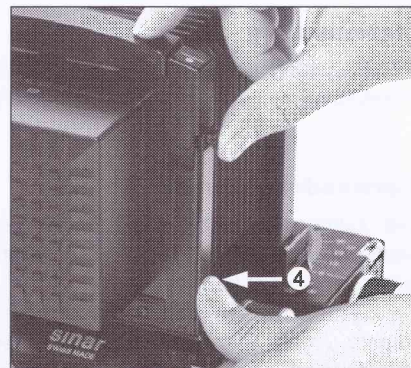

5. Wait a few minutes before operating the *Release Lock p3* for the first time, so the adhesive can dry some.

Operation

After having mounted the *Release Lock p3*, in order to release one of the locking buttons of the Sinar p3 pull the *Release Lock p3* slightly to the side (5) and simultaneously press the locking button (6).

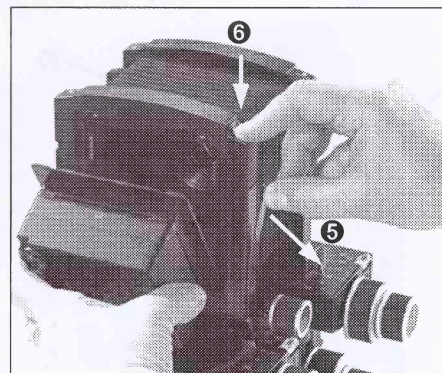

Rod Holder

If you wish using a Rod Holder 100 472.41.000, this can just be mounted on top of the *Release Lock p3*.

